



## True Wireless Earphones & Charging Case

Ear Shots SE

Item ref: 100.563UK

User Manual

Introducing the next generation of Ear Shots; taking your wireless listening experience to a new level. An improved, compact design offers a more secure fit, intuitive touch controls and true wireless technology, so you can control your music with ease without the hassle of tangling wires. These super light earphones feature dynamic drivers and Bluetooth 5.0 technology for seamless connection to smart devices. An inbuilt microphone and hands-free function allow for more freedom when answering calls. Quickly charge your earphones with the charging case providing up to 9 hours additional play time so there's nothing to hold you back!

### Features

- Improved design that's smaller in size but greater in performance
- Intuitive touch controls handle your music with ease
- Dynamic drivers that deliver a deep immersive sound experience
- Rechargeable with 180mAh charging case
- Bluetooth 5.0 connectivity for optimum transmission speed
- Built-in microphone for hands-free calls
- iOS and Android compatible

### In the Box

- 2pcs True wireless earphones
- Charging case
- USB charging lead (25cm)
- User guide

### Technical Specifications

Speaker Driver	10mmØ dynamic
Frequency Response	20Hz -20kHz
Sensitivity	-42dB
Impedance	32 Ohms
Power: Battery	Earphones: 2x internal 30mAh, Charging case: 180mAh
Battery Life (hours)	Earphones: 3 hours max, Charging case: Up to 9 additional hours playback
Standby Time	100 hours (approx.)
Charge Time	Earphones: 1 hour (approx.), Charging case: 1 hour (approx.)
Bluetooth Version	V5.0
Bluetooth Range	Up to 10m (clear line of sight)
Dimensions	Earphones: 33 x 18 x 18mm, Charging case: 44 x 44 x 22mm
Weight:	Earphones: 2 x 2.75g, Charging case: 30g (including headphones)

### Overview



### Before first use

Even though your Ear Shots SE will come with some battery charge, it's advisable to fully charge them before first use. Connect the charging case and earbuds to a suitable USB power source using the lead provided and leave for around 1 hour to ensure they are ready for use. When charging, the charging case LED will flash red and when fully charged it will go out.

### Pairing in True Wireless mode

The Ear Shots SE are fitted with an intelligent chipset that allows instant pairing on smart devices. To enter pairing mode simply open the lid of the charging case and the LED indicator on the case will glow green. Open the Bluetooth list on your smart device and search for the pairing name "AV:LINK Ear Shots SE" and select. If asked for a pairing code, enter "0000" and your device should then connect. Once paired you can reconnect or disconnect to your device at any time by simply opening and closing the lid on the charging case. Remove either earbud for mono or hands-free use or both earbuds to experience the amazing stereo sound experience of Ear Shots SE.

### Play/pause

Each earbud has a multi-function (MF) touch button which is located on the outside surface of the earbud stalk (see Overview above). To play or pause the current track, press the button on either earbud once.

### Next track/previous track

To move to the next music track, press the multi-function touch button on the right earbud twice and to move to the previous track repeat the procedure on the left earbud.

### Increase/decrease volume

To increase the master volume, press the multi-function touch button on the right earbud three times and to decrease the master volume repeat the procedure on the left earbud.

### Voice assistant

To activate your device's in-built voice assistant (Siri, Alexa etc), press and hold one of the multi-function touch buttons for around 3 seconds then release. You will hear a beep prompting for a voice command. You can then ask for anything you want the device to do, such as tell you the weather, move to the next track, play a specific track or album or even find your way home using a maps application. **NOTE:** voice assistant is only available on compatible Apple and Android devices, check your device's handbook for more information.

### Hands-free operation

When you receive a phone call during audio playback, a ringtone can be heard in the earbuds. To accept the call, press the MF touch button on either earbud once or twice to reject the call. When you have completed the call, hang up by pressing the MF touch button on either earbud again.

### Charging the earbuds and case

To charge the earbuds, carefully place them in the corresponding magnetic ports of the charging case and close the lid. The LED indicator will glow red and when charging is complete it will go out. It usually takes around 1 hour to fully charge the earbuds from 'flat'. There is also a charging button located on the back of the case which will stop and start the charging process when pressed. The charging case is a compact, magnetic carry case and power bank, with capacity to fully recharge the earbuds up to 3 times. To charge the charging case, connect it to a compatible USB power socket using the charging cable provided. When charging, the LED indicator on the front of the charging case will flash red and when fully charged, it will go out.

### Resetting the earphones

If you encounter any recurring problems with your Ear Shots SE the best solution is to erase them from your smart device and start again. To perform this procedure first return the earbuds to the charging case and close the lid. Next open up the Bluetooth device list and look for "AV:LINK Ear Shots SE" and select. Next click on "Forget this device" and then repeat the "Pairing in True Wireless Mode" procedure as seen above.

### FAQ

- Q)** The Ear Shots SE will not pair with my device. **A)** Check that the earphones are in pairing mode; Bluetooth is enabled on your device; and the device is set as 'discoverable'.
- Q)** The Ear Shots SE disconnect with my device within the stated 10m transmission distance. **A)** The maximum transmission distance stated is dependent on a clear line of sight between the earphones and your device. If there are large metallic objects or other devices transmitting radio or wireless signals in the vicinity, they may impact on the reception of the earphones.
- Q)** The Ear Shots SE won't reconnect with my device. **A)** On occasion, your Bluetooth device or the earphones may enter a locked state and need resetting. To do this, follow the instructions for "Performing a factory reset" above.
- Q)** One of the earbuds drops in and out of signal. **A)** On occasion there may be something interfering with the connection between each earbud and your smart device which may cause performance issues. When this happens try moving your smart device nearer to the earbuds or out of bags or pockets where the signal may be weakened.

### Safety Disclaimer



Do not attempt to service this product yourself as opening or removing covers may result in fire, electric shock or equipment damage and will also invalidate the warranty. This product must be kept away from water and high humidity along with high temperatures and direct sunlight. Prolonged listening at high volumes can cause hearing damage. Keep away from young children as small parts can be a choking hazard.



This product is classed as Electrical or Electronic equipment and should not be disposed with other household or commercial waste at the end of its useful life. The goods must be disposed of according to your local council guidelines.

Hereby, AVSL Group Ltd. declares that the radio equipment type: 100.563UK complies with Directive 2014/53/EU  
The full text of the EU declaration of conformity for 100.563UK is available at the following internet address:  
<http://www.avsl.com/assets/exportdoc/1/0/100563UK%20CE.pdf>

### Errors and omissions excepted.

Copyright© 2021 AVSL Group Ltd, Unit 2 Bridgewater Park,  
Taylor Road, Trafford Park, Manchester. M41 7JQ.

AVSL (Europe) Ltd, Unit 3D North Point House,  
North Point Bus. Park, New Mallow Road, Cork, Ireland.